



How to do a Firmware-Update on your existing PHOENIX-LIVE USB Interface:

- 1) Plug in your interface (Just one at the time)
- 2) Go to “Hardware-Settings” > Hardware-Manager

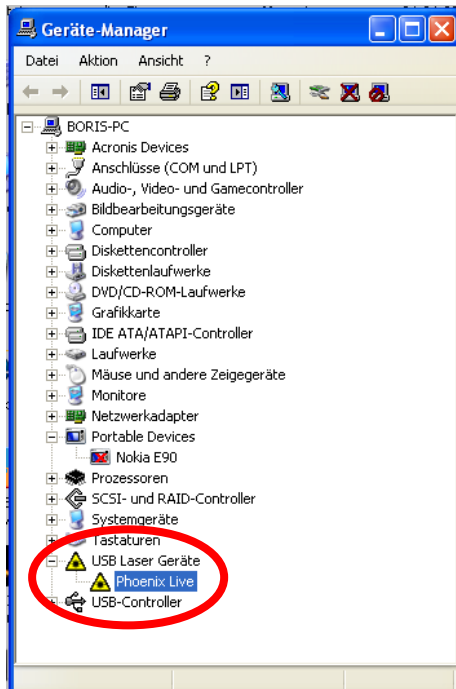


- 3) Doubleclick on the PHOENIX LIVE Device

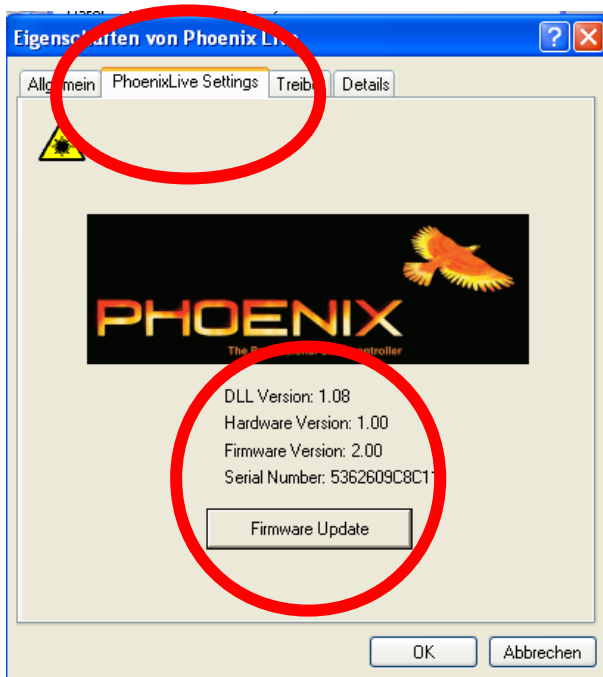


- 4) If you have a Hardware Version 1.00 / Firmware Version 2.00 you need to upgrade now! Click on “Firmware Update”


- 5) The Windows-Dialog-Box is opening... Choose the file “phoenixlive.fw”
And click OK / OPEN

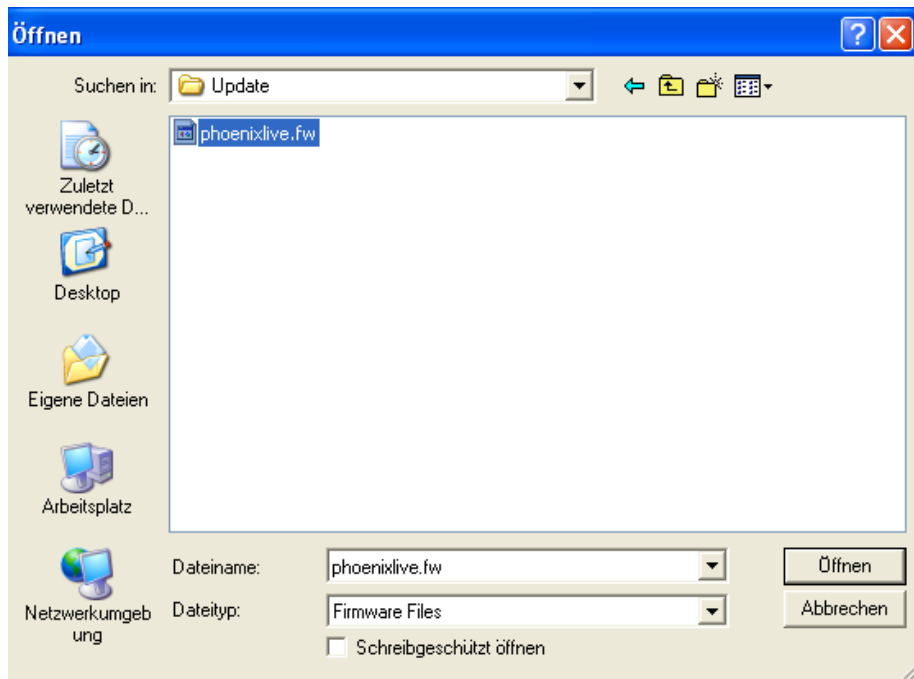

6)

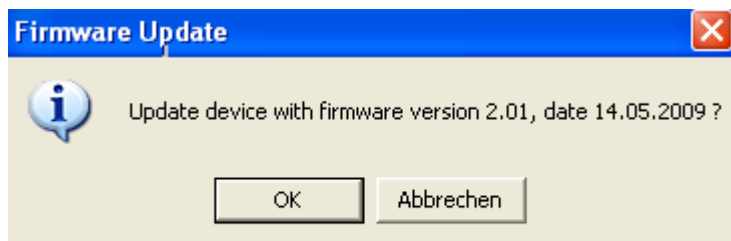

Click on “OK” to update your firmware-Version!

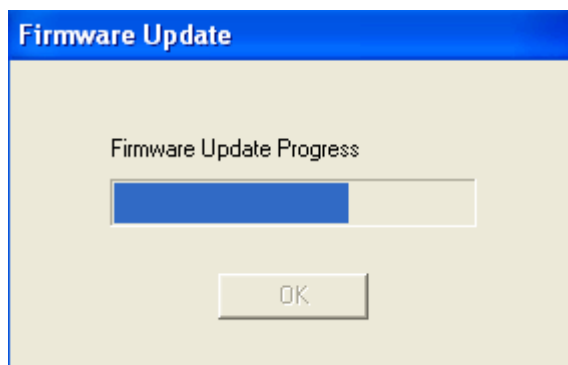

- 7) After it is finished, wait few seconds, click “OK” and unplug your interface
8) Plug in your interface again. Finished! The Firmware is now upgraded!