



Quick Start Guide

1. Configure ShowNET Interface:

Dip Switch setting at the interface for AutolP:

switch	1	2	3	4	5	6	7	8	9	10
On (1) / Off (0)	0	0	0	0	0	1	0	0	0	0

Unplug power supply and reconnect it after having set the Dip switches

2. Download the latest Laserworld Showeditor Software version:

Go to <http://www.showeditor.com> and download the latest version of Laserworld Showeditor.

The Software version on the CD that comes with this package is only meant as fall-back option. The very latest version can always be found on the website and it's highly recommended to use that one.

3. Install the Laserworld Showeditor Software:

Follow the instructions of the Installer for the Laserworld Showeditor Software Installation.

4. Start Laserworld Showeditor with a click on the Desktop icon

If any error shows up, please refer to our FAQ section at <http://www.showeditor.com/faq>

5. Select the operation mode - Live, Timeline, Figure Editor, etc.

Any option is available later as well, as all software parts are completely integrated and linked. Go to *Options -> Hardware* and make sure the ShowNET interface is properly connected. Assign it to track one.

Live Show Window:

Already comes with a large set of preset Figures - give it a try and instantly start with your laser show

Timeline Window:

Especially designed for advanced timeline laser show programming. There are several shows included in delivery - load them and instantly get going

Figure Editor:

Allows for easy figure creation - just draw any shapes or type a text and directly output it to your laser

Read the user manual for more details or if you face any problems.
The user manual can also be found online on

<http://www.showeditor.com>