



# PRO-300G MH

## USER MANUAL



**Please read this manual carefully before use!**


**I****Table of contents**

|                              | <b>Page</b> |
|------------------------------|-------------|
| 1. SAFETY INSTRUCTIONS       | 3           |
| 2. OPERATING DETERMINATIONS  | 4           |
| 3. OPEN THE BOX FOR CHECKING | 5           |
| 4. SAFETY INSTRUCTIONS       | 5           |
| 5. ATTENTION                 | 6           |
| 6. WARNING                   | 6           |
| 7. DESCRIPTION OF THE DEVICE | 7           |
| 8. CONNECTION TO THE MAINS   | 8           |
| 9. CONTROL BOARD OPERATION   | 9           |
| 10. DMX512 OPERATE           | 10          |
| 11. MAINTENANCE              | 11          |
| 12. TECHNICAL SPECIFICATIONS | 11          |
| 13. ELECTRICAL DIAGRAM       | 12          |

**Checking Parts**

Please check if the following parts are included:

- 1 x PRO-300G MH Laser
- 1 x Power cable
- 1 x User manual

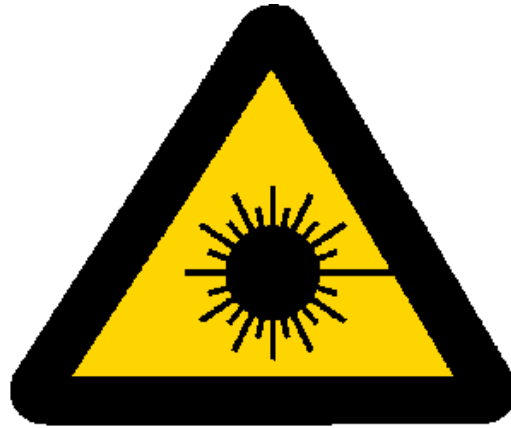

## **DANGER LASER RADIATION!**

Avoid direct eye exposure!

Laser radiation can cause eye damage and/or skin damage

All protective measures for a safe operation of this laser must be applied.

### **1. SAFETY INSTRUCTIONS**

- If the device has been exposed to drastic temperature fluctuation, do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- 1. The laser must only be used for shows. The operation is only allowed if it is controlled by a skilled and well-trained operator.
- Never leave this device running unattended and keep it away from children and unauthorized persons.
- 2. Keep away from heaters and other heating sources. In order to safeguard sufficient ventilation, leave 50 cm of free space around the device.
- 3. Never direct the laser beam to people or animals.
- 4. CAUTION LASER DIODE: Never unscrew the housing!  
There are no serviceable parts inside the device. Maintenance and service operations shall only be carried out by authorized dealers.
- 5. Always disconnect from the mains when the device is not in use or before cleaning it.
- **HEALTH HAZARD! Never look directly into the light source, as sensitive persons may suffer an epileptic shock!**

## 2. OPERATING DETERMINATIONS

6. The operator has to make sure that laser radiation – also reflected laser radiation – higher than the highest allowed level is avoided by technical or organisational measures.
7. Make sure that the used voltage is : AC 220V~240V, 50/60Hz
8. If the device is used in a flying installation, the mounting brackets and an appropriate safety-rope must be fixed.
9. Laser effects are not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
10. In some countries, the operator must notify the accident insurance and the authority for industrial safety, before operating a laser. For more information, contact the relevant authorities.
11. Please consider that unauthorized modifications on the device are forbidden due to safety reasons!
12. If this device will be operated in any way differently than described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock, etc.

## OPEN THE BOX AND CHECKING

Congratulations on choosing our products! Please carefully read this instruction manual in its entirety and keep it well for using reference. This manual contained about the installation and the relative using information of this products. Please according to this manual's relative speaking when using this equipment.

This equipment was made of new style, high intensity plastic and cast aluminium. It fully shows the modern times light characteristic with beauty structure. And it was made according to CE standard. Fully up the international standard of DMX512 agreement. Master or slave in phase control. Can be use in large entertainment, theater, performing and playing hall, etc.

When receiving this product please carefully bring and put; and check that whether this equipment has been damaged or not during transportation. And please also check the following thing was enclosed:

Laser light 1PC

Pin 25 ILDA Signal cable 1PC

3 pin signal line 1PC

User manual 1PC

Power cable 1PC

Safety string 2PCS

## SAFETY INSTRUCTIONS

Every person involved with installation and maintenance of this device have to:

- be qualified
- follow the instructions of this manual

### CAUTION:

- **Keep** this device away from rain and moisture!
- **Unplug** mains lead before opening the housing!
- **FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY**
- **BEFORE YOU INITIAL START - UP!**
- **Be careful** with your operations.
- **With a high voltage** you can suffer a dangerous electric shock when touching the wires!
- **This device** has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

### Important:

- The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.
- Please consider that damages caused by manual modifications to the device are not subject to warranty.
- Never let the power-cord come into contact with other cables! Handle the power-cord and all connections with the mains with particular caution!
- Make sure that the available voltage is not higher than stated on the rear panel.
- Always plug in the power plug least. Make sure that the power-switch is set to OFF-position before you connect the device to the mains. The power-plug has to be accessible after installing the device.
- Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the powercord from time to time.


### ATTENTION

1. Must operate according to the user manual. Don't separate the light personally. Call the technician when the machine breaks down.
2. Please do not see the laser beam directly to avoid any damage.
3. Before connect or disconnect the power, please adjust the luminance of the laser diode to the least to avoid any damage to the laser diode.
4. This unit should be keep dry, do not use in the rain or dank and dusty environment. It can be use in the outdoor with the water-proof cover protector.
5. Set the light immobility and try to avoid strong shake or hit.
6. Prevent dust into the equipment to avoid problems.
7. Please keep that there's no other equipment or decorating materials obstructed the exhaust fan and the vent-pipe when the equipment was working.
8. Before connect power, check the plug is immobility or not, power line should be connect well.
9. Please do not open or close the equipment frequently that's to avoid any affect to the life span of the laser diode, and try the best to avoid the long time working.
10. Due to the characteristic of the laser diode, after three hours working, it should be close at least 25 minutes until the laser diode cooling then work again.
11. Don't touch the light or draw the power line when your hand was wet. And do not pull the electronic power line.
12. Maintain the distance at least 10M above from the equipment to the object.
13. This equipment does not have any parts can repair for the users, please do not open the equipment.
14. When the laser diode became dim or damaged please contact the dealer timely.
15. To use the original package when transport again and to avoid shake.

### WARNING

- 1、Don't look the light directly to prevent make some destroy with eyes..
- 2、Keep the space between light equipments and the lighted things more than 10 meter.

## DESCRIPTION OF THE DEVICE

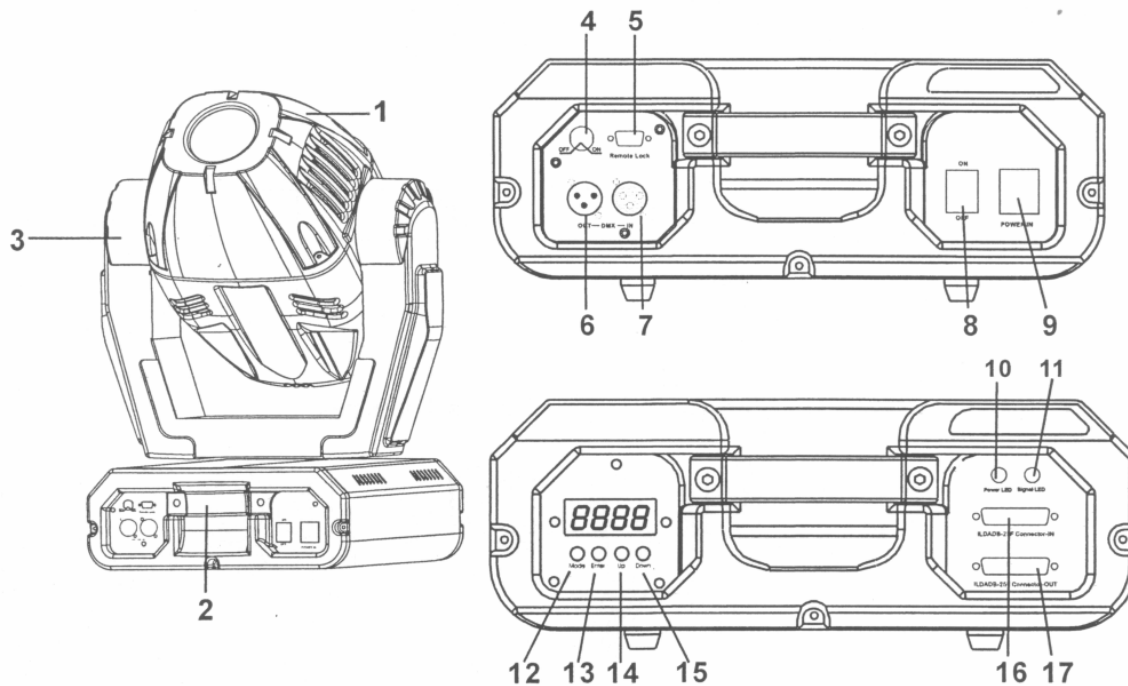

- 1 -moving head
- 2 -yoke
- 3 -carry handles
- 4 -Laser diode ON/OFF
- 5 -Remote Lock
- 6 -DMX OUT
- 7 -DMX IN
- 8 -POWER ON/OFF
- 9 -POWER IN

- 10 -Power LED
- 11 -Signal LED
- 12 -Mode
- 13 -Enter
- 14 -UP
- 15 -Down
- 16 -ILDADB-25F Connector-IN
- 17 -ILDADB-25F Connector-OUT

**NOTE:**

1. When **PC SIGNAL IN** and **ILDA DB 25F connector** ' s connection port are free, the lamp will drive by the inside program, temporality it can control by music or DMX 512 signal.
2. When **PC SIGNAL IN** connects with USB interfacial card, the lamp will be control by software i.top which was installed in the computer.
3. After connect the ILDA DB 25F, The lamp will change to ILDA connected port drive mode ,this connection port can receive all the signal of laser perform software that accord with the ILDA standard, such as LD-2000 of Pangolin Company.
4. When the **PC SIGNAL IN** and the **ILDA DB 25F Connector** were connected, then the system will at an abnormal statement, lamp still control by inside program , but not respond to the exterior input signal.

## CONNECTION TO THE MAINS

### 1. Verify the power supply settings before applying power!

If you wish to change the power supply settings, see the chapter Appendix.


Connect the fixture to the mains with the enclosed power cable and plug.

The earth has to be connected!

The occupation of the connection-cables is as follows:

| Cable (EU)   | Cable (US) | Pin     | International |
|--------------|------------|---------|---------------|
| Brown        | Black      | Live    | L             |
| Light blue   | White      | Neutral | N             |
| Yellow/Green | Green      | Earth   | ⊕             |

### 2. DMX-512 connection/connection between fixtures

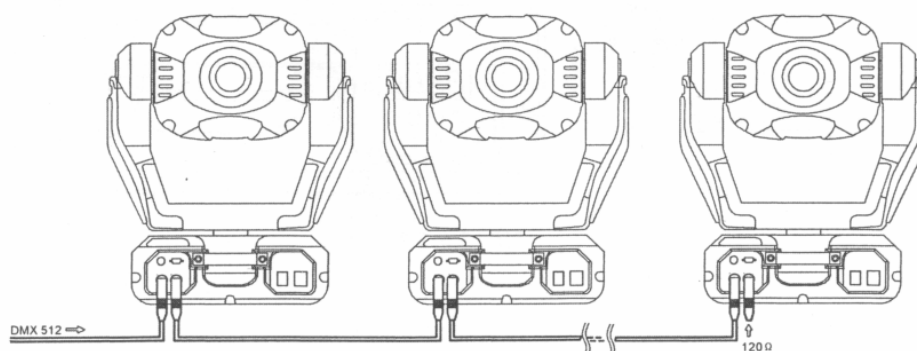

Only use a stereo shielded cable and 3-pin XLR-plugs and connectors in order to connect the controller with the fixture or one fixture with another.

### Occupation of the XLR-connection:

#### DMX-OUTPUT XLR mounting-socket:



- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)


#### DMX-input XLR mounting-plug:



- 1 - Ground
- 2 - Signal (-)
- 3 - Signal (+)

**Caution:** At the last fixture, the DMX-cable has to be terminated with a terminator. Solder a 120 Ω resistor between Signal (-) and Signal (+) into a 3-pin XLR-plug and plug it in the DMX-output of the last fixture.

#### The transform of the controller line of 3 pins and 5 pins (plug and socket)

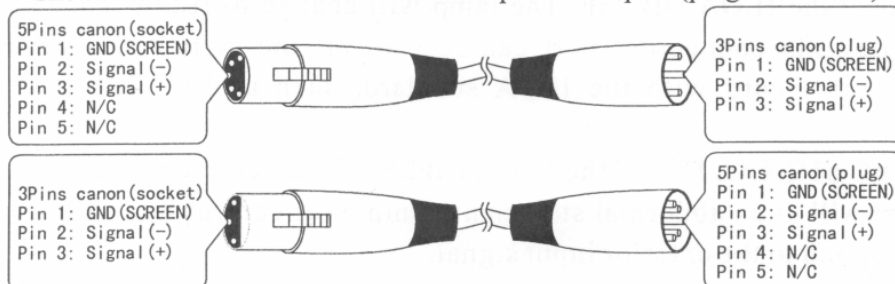


## CONTROL BOARD OPERATION

### Function Table:

| Mode         | Function                                            | Condition                    |
|--------------|-----------------------------------------------------|------------------------------|
| <i>PAN</i>   | Pan movement in positive or negative direction      | YES--negative direction      |
| <i>TILT</i>  | Vertical movement in positive or negative direction | YES--negative direction      |
| <i>Addr</i>  | Address code set                                    | UP add 10/s<br>DOWN dec 10/s |
| <i>reset</i> | Reset                                               | YES--reset                   |
| <i>run</i>   | Working mode                                        | OFF DMX512 mode              |
|              |                                                     | AUTO Automatic               |
|              |                                                     | SOUND Null                   |

### Control board operation way:

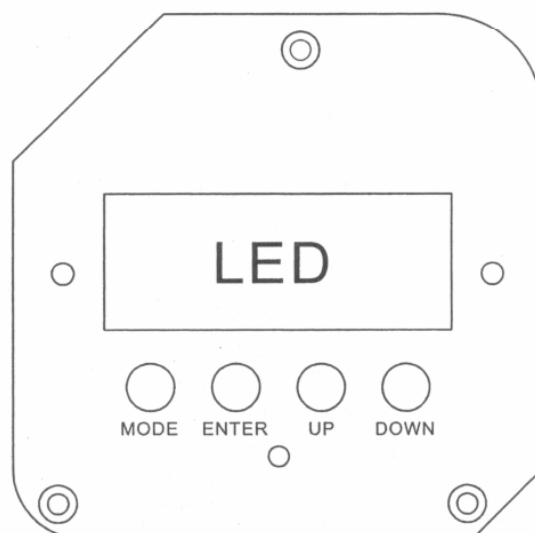

1. Select working mode by pressing MODE.
2. Press UP and DOWN to select working condition.
3. Press ENTER to confirm the selection.

### DMX512 operate

The product has 16 operate channels(international standard DMX512 signal),The details as follow:

|    | CHANNEL                         | VALUE   | FUNCTION                        |
|----|---------------------------------|---------|---------------------------------|
| 1  | PAN                             | 0~255   | PAN 0~530°                      |
| 2  | TILT                            | 0~255   | TILT 0~280 °                    |
| 3  | Speed 1                         | 0~255   | 255 grade speed (fast to slow)  |
| 4  | Control Mode                    | 0-63    | Null                            |
|    |                                 | 64~127  | Self-motion                     |
|    |                                 | 128~255 | Manual                          |
| 5  | Shutter                         | 0~35    | Shutter                         |
|    |                                 | 36~255  | Beam out                        |
| 6  | Pattern                         | 0~255   | 64 patterns(0~255)/6=(0~43)     |
| 7  | Speed                           | 0~255   | 12 grade speed(0~255)/23=(0~11) |
| 8  | horizontal & vertical roll      | 0-63    | No rolling                      |
|    |                                 | 64~127  | Horizontal roll                 |
|    |                                 | 128~191 | Vertical roll                   |
|    |                                 | 192~255 | Horizontal & vertical roll      |
| 9  | Rotation & Point-Draw           | 0-63    | No Rotation & No Point-Draw     |
|    |                                 | 64~127  | Rotation                        |
|    |                                 | 128~191 | Point-Draw(Only Point)          |
|    |                                 | 192~255 | Rotation & Point-Draw           |
| 10 | Horizontal & vertical move      | 0-63    | No move                         |
|    |                                 | 64~127  | Horizontal move                 |
|    |                                 | 128~191 | Vertical move                   |
|    |                                 | 192~255 | Horizontal & vertical move      |
| 11 | Horizontal & vertical stretch   | 0~63    | No stretch                      |
|    |                                 | 64~127  | Horizontal stretch              |
|    |                                 | 128~191 | Vertical stretch                |
|    |                                 | 192~255 | Horizontal & vertical stretch   |
| 12 | Small To Large & Large To Small | 0~85    | No Zoom                         |
|    |                                 | 86~169  | Zoom from one point to large    |
|    |                                 | 170~255 | Zoom from large to one point    |
| 13 | Slow-draw speed                 | 0~255   | 43grade speed(0~255)/6=(0~42)   |
| 14 | Scan Speed                      | 0~255   | 255 grade speed (fast to slow)  |
| 15 | Null                            | 0~255   | Null                            |
| 16 | Size                            | 0~2     | Original size                   |
|    |                                 | 3~255   | Zoom from one point to large    |

## 6. MAINTENANCE

Maintenance should be performed every 15-day period, by using a sponge which is dipped with alcohol, rather than wet cloth or other chemical liquid, to clean the mirror.

Always disconnect from the mains when the device is not in use or before cleaning it.

There are no serviceable parts inside the device. Maintenance and service operations are only to be carried out by authorized dealers.

**Never look directly into the light source.**

**Always disconnect from the mains when the device is not in use or before cleaning it.**

## 7. TECHNICAL SPECIFICATIONS

**Power supply:** AC 100V-120V or 220V-240V, both at 50/60 Hz

**DMX 512:** 16 channels

**Condition temperature:** -10°C ~ +35°C

**Input signal bandwidth:** 0~1000Hz

**X/Y axes beam scanning optical angle:** 0 ~ ±30°

**Signal input power:** -5V~+5V

**Power consumption:** 105 W

**Working mode:** ILDA, DMX512, automatic mode (sound, stand-alone programmes)

**Optical power:** Green: ca. 300mW

**Laser classification:** 3b

**Weight:** 30 kg


**Dimensions:** 459 x 479 x 639 mm (L x W x H)

## PLEASE NOTE

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

Laserworld cannot be made liable for damages caused by incorrect installations and unskilled operation!

# ELECTRICAL DIAGRAM

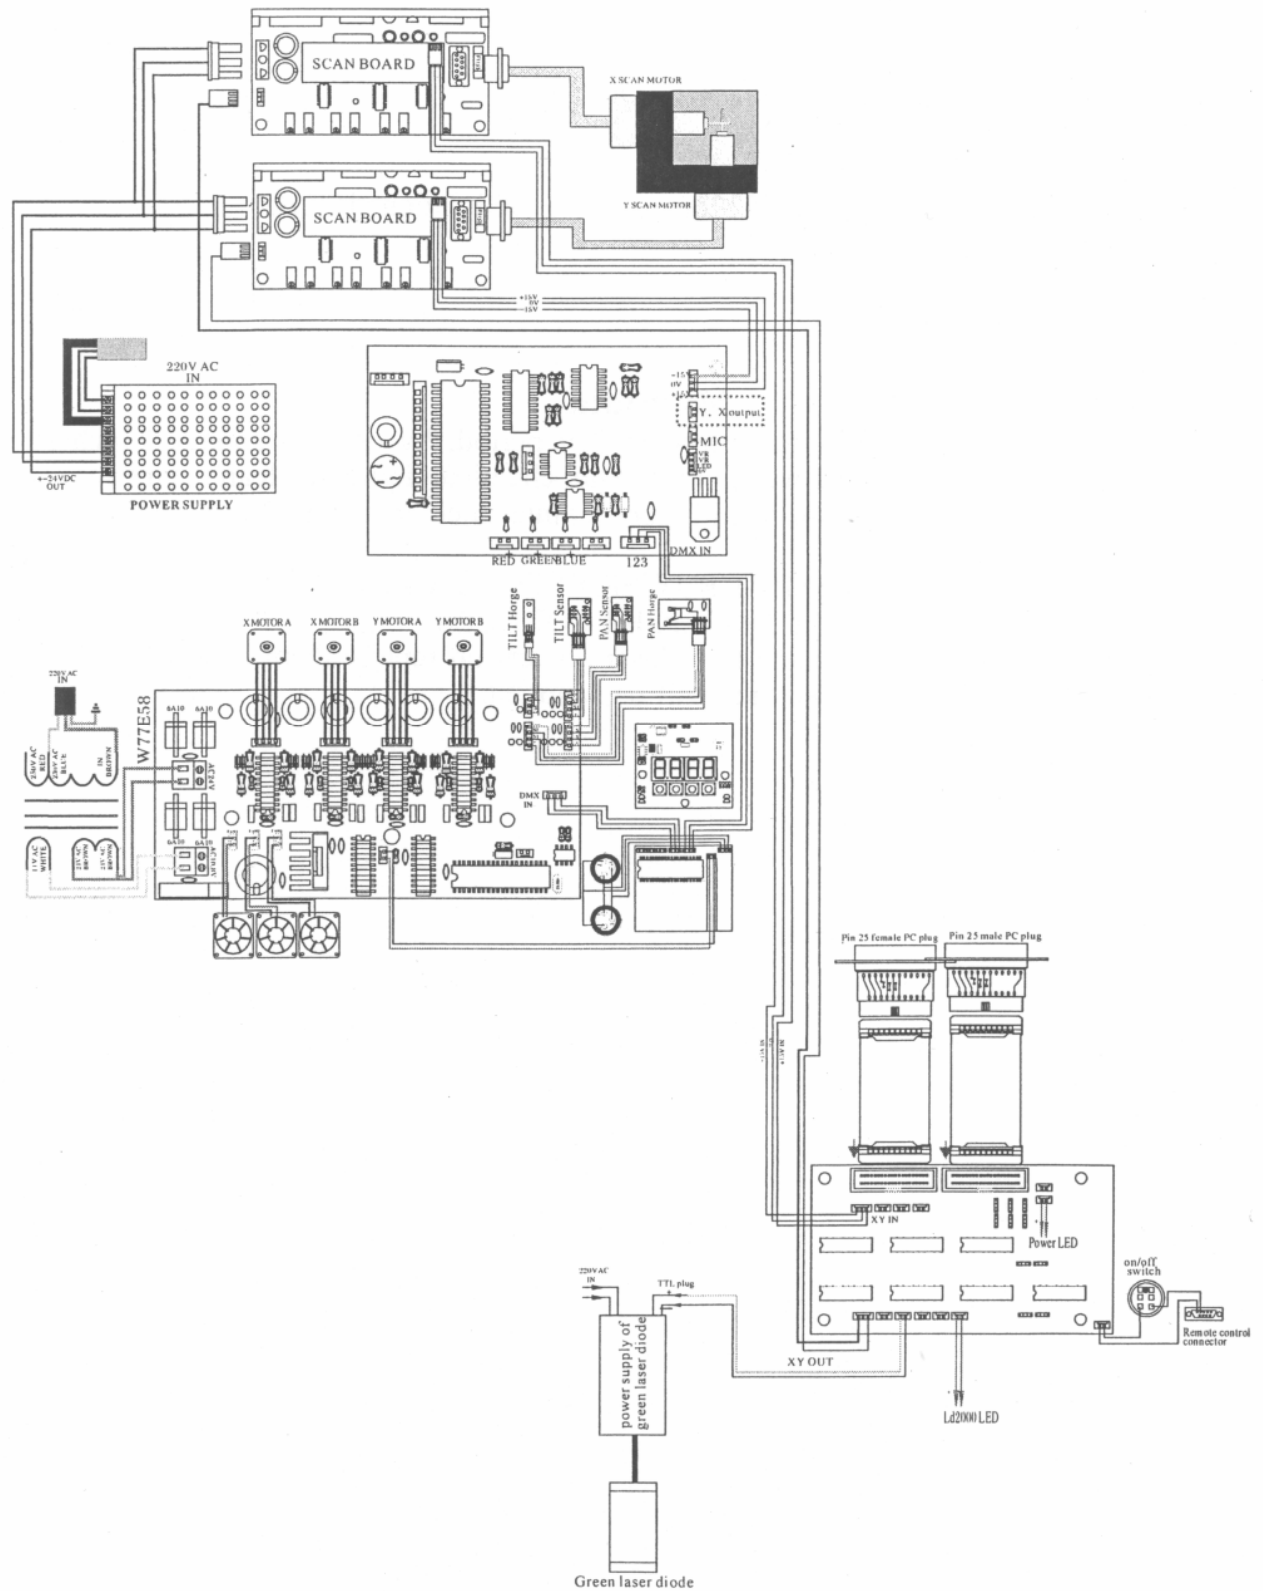

## EU- Declaration of Conformity



We hereby confirm that the following device

### **Laserworld Moving Head PRO-300G MH**

complies with the essential safety requirements, laid down in the regulations of the committee to assimilate the provisions of law of all participating EU states on the electromagnetic compatibility (98/336/EWG).

The device has been classified considering the following EU-norms on electromagnetic compatibility:

DIN EN 55103-1: 1996

DIN EN 55103-2: 1996

DIN EN 61000-3-2:2000 + A2: 2005

DIN EN 61000-3-3:1995 + A1: 2001

Assessment of compliance of the product with the requirements relating to the Low Voltage Directive (LVD) was based on the following standards:

DIN EN 60065 : 2002

Furthermore, the device is verified in correspondence to the laser class regulations DIN EN 60825-1, if properly set up according to the upper mentioned laser safety regulation. After installing the device, an inspection and official approval is indispensable for the overall setup. The inspection must follow the european guidelines EN 60825-1 and corresponding regulations for the prevention of accidents BGV-B2.

This declaration is executed on behalf of the Laserworld Moving Head PRO-300G MH Laser manufacturer.

### **Laserworld (Switzerland) AG**

Oberstrasse 1  
8274 Tägerwilen  
SWITZERLAND

Authorized person:  
Supervisory board Ms Rhea Gössel

place of business: 8274 Tägerwilen / SWITZERLAND  
company number: CH-440.3.020.548-6  
Commercial Registry Kanton Thurgau

[www.laserworld.com](http://www.laserworld.com)  
[info@laserworld.com](mailto:info@laserworld.com)

representative according to EMVG:  
Cleantech Europe GmbH  
Managing Director: Thomas Schulze  
Fürkhofstr. 5  
81927 München / DE